

ENGLISH

User guide	3
First use	3
Frequently asked questions (FAQ)	3
Technical specifications	3
AUDIO	3
ACTIVE NOISE CANCELLING (ANC)	3
TRANSPARENCY MODE	3
CONNECTIVITY	3
HANDS-FREE MICROPHONE	3
BATTERY	3
EARPHONE	3
CHARGING CASE	4
Care and maintenance	4
Warranty	4

ENERGY♥SYSTEM



Thank you for trusting us and purchasing your new *Display ANC earphones*. We hope you enjoy it.

User guide

Consult the quick guide for use by clicking [here](#).

First use

Remove the protective strips on each of the earbuds, put them back in the case and fully charge the device. With this gesture, the protection mode that we include by default to prevent battery degradation will be deactivated and it will be calibrated to obtain maximum performance from it.

Frequently asked questions (FAQ)

- **How can I reset the earphones?** Disconnect them from any Bluetooth sound source, place them in the case, unlock the screen and press the button on the bottom of the case three times in a row, right next to the charging connector. Put them in the case and when you take them out again you can connect them again via Bluetooth.

If you want to disconnect them from the last device you linked it to, place them in your ears and press either earbud 10 times. You will hear a beep, put them in the case, close the lid and when you open it again you can pair them again.

Technical specifications

AUDIO

- Frequency response: 20 Hz ~ 20 kHz
- Driver diameter: 10 mm
- Maximum power: 5 mW
- Design: in-ear
- Type: dynamic

ACTIVE NOISE CANCELLING (ANC)

- Reduction of up to -30 dB between 20 and 1000 Hz

TRANSPARENCY MODE

- Transparency mode to listen to outside sounds

CONNECTIVITY

- Bluetooth version 5.3, class 2
- Supported audio codecs: SBC / AAC
- Working frequency: 2.4 GHz
- Maximum signal power: < 20.00 dBm
- Supports Bluetooth profiles HSP / HFP / A2DP / AVRCP
- Up to 20 meters range
- True Wireless function with automatic pairing
- Hands-free function
- Voice assistant compatible with Google/Siri

HANDS-FREE MICROPHONE

- Type: integrated
- Sensitivity: -38 dB ± 3 dB (@1 kHz)
- Frequency range: 100Hz ~ 10kHz

BATTERY

EARPHONE

- Capacity: 40 mAh per earbud
- Type: lithium polymer

- Autonomy with ANC active: 5 hours*
- Autonomy with ANC deactivated: 6 hours*
- Charging time: 1 hour
- Charging system: charging case

CHARGING CASE

- Capacity: 500 mAh
- Type: lithium polymer
- Extra autonomy with active ANC: 20 hours*
- Extra autonomy with ANC deactivated: 24 hours*
- Charging time: 2 hours
- Charging system: USB type C

*This information is approximate. The autonomy depends on the selected volume and the type of music played.

Care and maintenance

- Do not expose the device to shocks, dust, humidity or high temperatures.
- Do not use corrosive or abrasive cleaning products. *Do not disassemble it. Any repair must be carried out exclusively by qualified personnel of Energy Sistem Technology, S.A.
- Be sure to keep your device turned off when not in use and do not leave it for a long period of time with the battery completely discharged.

Warranty

You can consult the warranty conditions [here](#).