


ENGLISH

Quick start guide	3
Frequently Asked Questions (FAQ)	3
Tech Specs	3
Audio	3
Connectivity	3
Hands-free microphone	3
Earphone Battery	3
Charging Case Battery	3
Others	3
Safety and maintenance	4
Prevention of hearing loss	4
Warranty	4

ENERGY  SISTEM

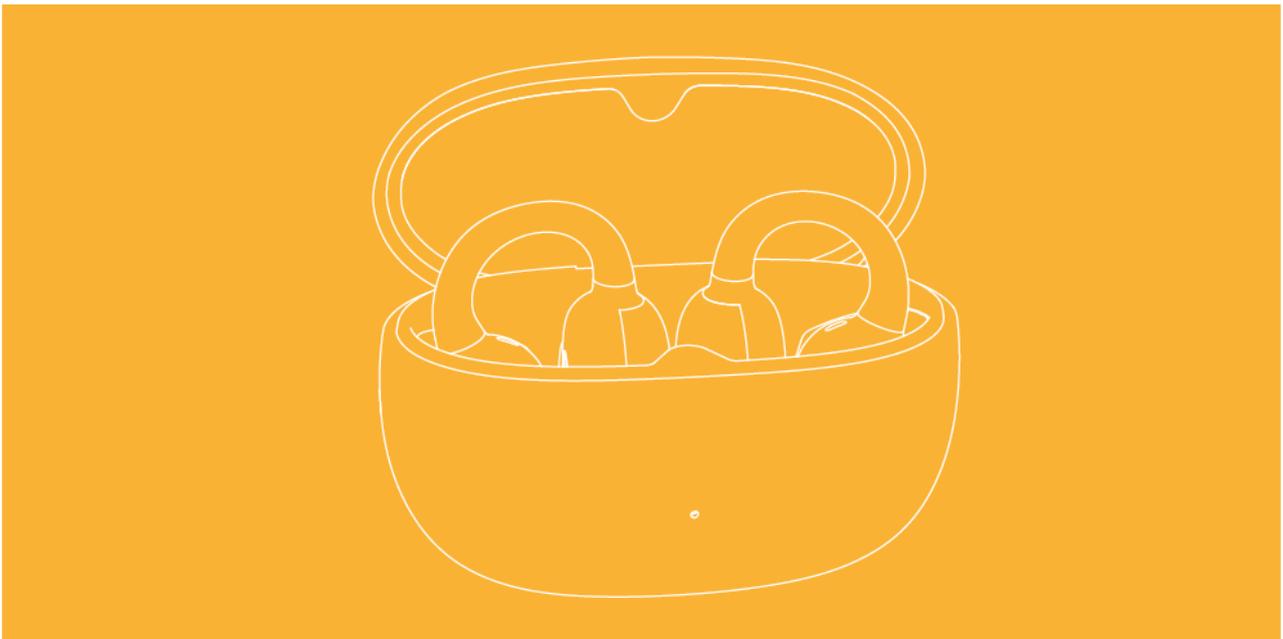

Thank you for trusting us and purchasing your new Energy earphones. We hope you enjoy it.

Quick start guide

Consult the quick guide by clicking [here](#).

Frequently Asked Questions (FAQ)

- **How do I reset the earphones?** Disconnect the earphones from any Bluetooth sound source, put them in your ears and press 7 times quickly the touch control of both earphones simultaneously, you will hear a 'beep' sound and they will turn off automatically. Put them in the charging case and when you take them out again you can connect them again via Bluetooth.

Tech Specs

Audio

- Frequency response: 50 Hz ~ 20 kHz
- Driver diameter: 12 mm
- Maximum power: 5 mW
- Design: Open sound
- Type: dynamic

Connectivity

- Bluetooth version 5.4, class II
- Operating frequency: 2.4 GHz
- Maximum signal strength: < 20.00 dBm
- Supported Bluetooth profiles: HSP / HFP / A2DP / AVRCP
- Supported Bluetooth codecs: SBC / AAC
- Up to 20 metres range
- Hands-free function
- Google/Siri compatible voice assistant

Hands-free microphone

- Type: Built-in
- Sensitivity: -42 dB ± 3 dB
- Frequency range: 100 Hz ~ 10 kHz

Earphone Battery

- Capacity: 40 mAh / 3.7 V
- Type: Lithium polymer
- Battery life at medium volume: 5 hours
- Charging time: 1 hour

Charging Case Battery

- Capacity: 400 mAh / 3.7 V
- Type: Lithium polymer
- Extra autonomy: 18 hours
- Charging time: 1,5 hours
- Charging system: USB Type C

Others

- IPX4 waterproof certificated.

*Approximate information. Battery life depends on volume selected and type of music played.

Safety and maintenance

- Do not expose the device to shock, dust, moisture or high temperatures.
- Do not apply corrosive or abrasive cleaning agents to the device.
- Do not disassemble the device. Any repair must be carried out exclusively by qualified Energy Sistem Technology, S.A. personnel.
- Be sure to keep the device switched off when not in use and do not leave it for a long period of time with the battery completely discharged.
- Keep the device and its packaging out of the reach of children and pets to avoid possible accidents.
- Do not use the device while driving a vehicle.

Prevention of hearing loss

Listening to music at high volume levels for long periods of time can cause permanent hearing damage. To avoid hearing damage, we recommend turning down the volume of the player before starting music playback and then gradually increasing the volume to a comfortable, moderate listening level.

Warranty

You can check the warranty conditions [here](#).