


ENGLISH

User Guide	3
ESmart Connect App User Guide	3
Frequently Asked Questions (FAQ)	3
Technical Specifications	3
AUDIO	3
CONNECTIVITY	3
HANDS-FREE MICROPHONE	3
EARPHONE BATTERY	3
CHARGING CASE BATTERY	3
OTHERS	4
Safety and Maintenance	4
Hearing Loss Prevention	4
Warranty	4

ENERGY♥SISTEM

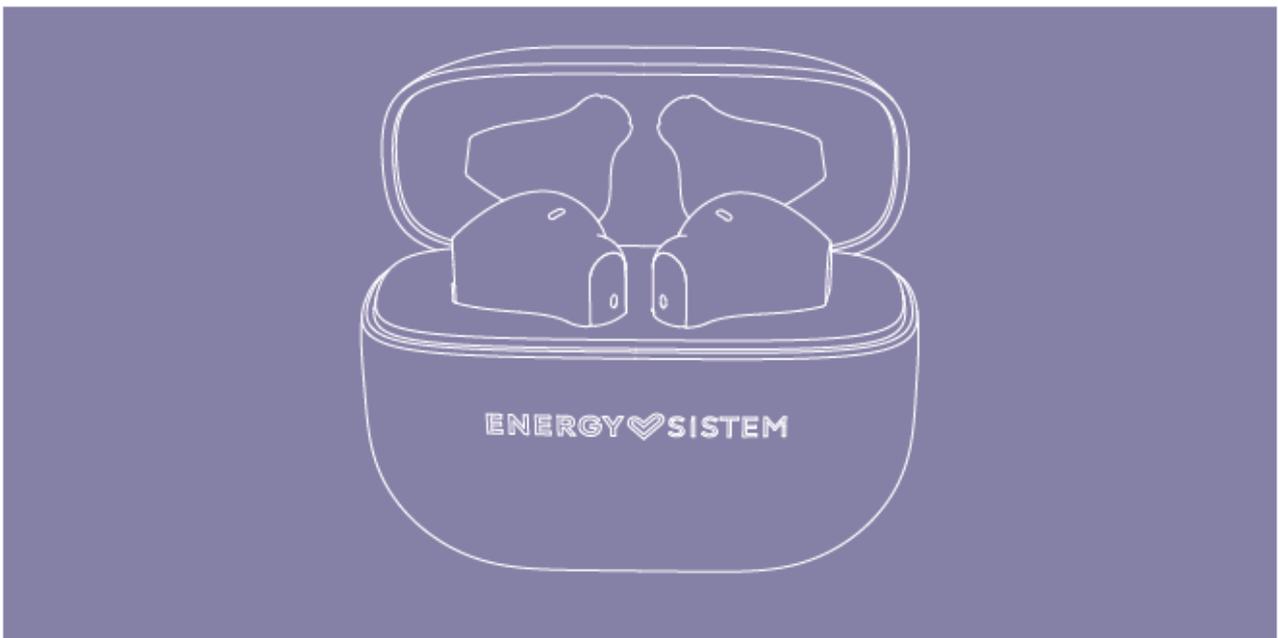

Thank you for trusting us and purchasing your new Energy Stylebuds. We hope you enjoy them.

User Guide

View the quick start guide by clicking [here](#).

ESmart Connect App User Guide

View the user guide by clicking [here](#).

Frequently Asked Questions (FAQ)

- **How do I reset the earbuds?** Disconnect the earbuds from any Bluetooth sound source, place them in your ears, and press the touch control on both earbuds simultaneously 10 times quickly. You'll hear a "beep" sound, and they'll automatically turn off. Insert them into the charging case and take them out again to reconnect via Bluetooth.

Technical Specifications

AUDIO

- Frequency response: 20 Hz ~ 20 kHz
- Driver diameter: 10 mm
- Maximum power: 5 mW
- Design: In-ear
- Type: Dynamic
- Impedance: 32 Ohm
- THD: < 1%

CONNECTIVITY

- Bluetooth version 5.4, class II
- Operating frequency: 2.4 GHz
- Maximum signal strength: < 20.00 dBm
- Supported Bluetooth profiles: HSP / HFP / A2DP / AVRCP
- Supported Bluetooth codecs: SBC / AAC
- Up to 20 meters range
- Hands-free function
- Compatible with Google/Siri voice assistant

HANDS-FREE MICROPHONE

- Type: Built-in
- Sensitivity: -38 dB ± 3 dB (@ 1 kHz)
- Frequency range: 100 Hz ~ 10 kHz

EARPHONE BATTERY

- Capacity: 30 mAh / 3.7 V
- Type: Lithium Polymer
- Battery life at medium volume: 5 hours*
- Charging time: 1 hour

CHARGING CASE BATTERY

- Capacity: 300 mAh / 3.7 V
- Type: Lithium Polymer
- Extra battery life: 20 hours*
- Charging time: 2 hours
- Charging system: USB Type-C

OTHERS

- IPX4
- Compatibility with the ESmart Connect app

*This figure is approximate. Battery life depends on the volume selected and the type of music played.

Safety and Maintenance

- Do not expose the device to impact, dust, moisture, or high temperatures.
- Do not apply corrosive or abrasive cleaning products to the device.
- Do not disassemble the device. Any repairs should be performed only by qualified personnel from Energy Sistem Technology, S.A.
- Make sure to keep the device off when not in use and do not leave it for long periods of time with the battery fully discharged.
- Keep the device and its packaging out of the reach of children and pets to avoid possible accidents.
- Do not use the device while driving a vehicle.

Hearing Loss Prevention

Listening to music at high volume for long periods of time can cause permanent hearing damage. To prevent hearing damage, we recommend lowering the volume on your music player before starting music playback and then gradually increasing the volume until you reach a comfortable, moderate listening level.

Warranty

You can check the warranty conditions [here](#).